

FAQ FF054 : splitted FV-UNS の読み込み方

FIELDVIEW

```
D:\work\external\Support\FieldView\SupportPage\FAQsite\FVX\FVX0054\FAQ_FF054_Read_Splitted_F...
ファイル(F) 編集(E) 表示(V) 検索(S) ウィンドウ(W) マクロ(M) その他(O) 1:1
1
2
3-- Copyright (c) 2011 VINAS
4-- All rights reserved.
5
6-- This sample FVX script is not supported by VINAS and VINAS provides
7-- no warranties or assurances about its fitness or merchantability.
8-- It is provided at no cost and is for demonstration purposes only.
9
10-- created on Mon. Mar. 7, 2011
11
12
13
14---- preparing input dataset
15data_input_table = [
16    data_format = "unstructured",
17    input_parameters = [
18        grid_file = [
19            name = "./quad_hex_grids.uns",
20            options = [
21                input_mode = "replace",
22                transient = "off"
23            ],
24        ],
25
26        results_file = [
27            name = "./quad_hex_results.uns",
28            options = [
29                input_mode = "replace",
30                transient = "off"
31            ],
32        ],
33    ],
34]
35
36
37---- read dataset
38SampleTableHandle= read_dataset(data_input_table)
39
```